



ONLINE FENCE SUPPLIES PTY LTD
ALUMINIUM SLAT FENCING

Horizontal Slat

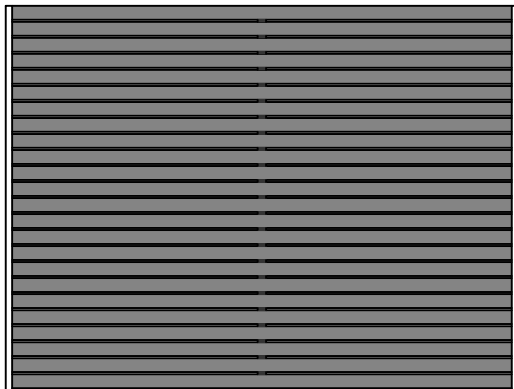

Vertical Slat

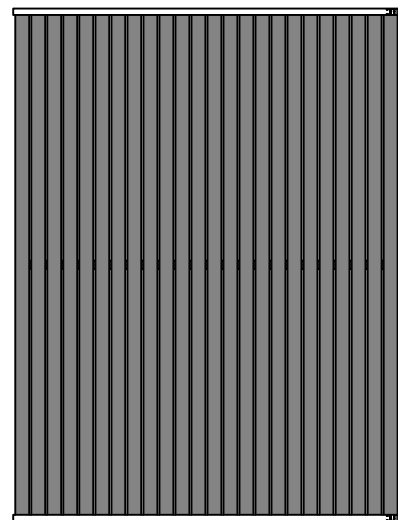


**ONLINE
FENCE SUPPLIES**




SHOPPING FOR FENCES MADE EASY

www.onlinefencesupplies.com.au




2400X1800mm Horizontal Installation P3-5


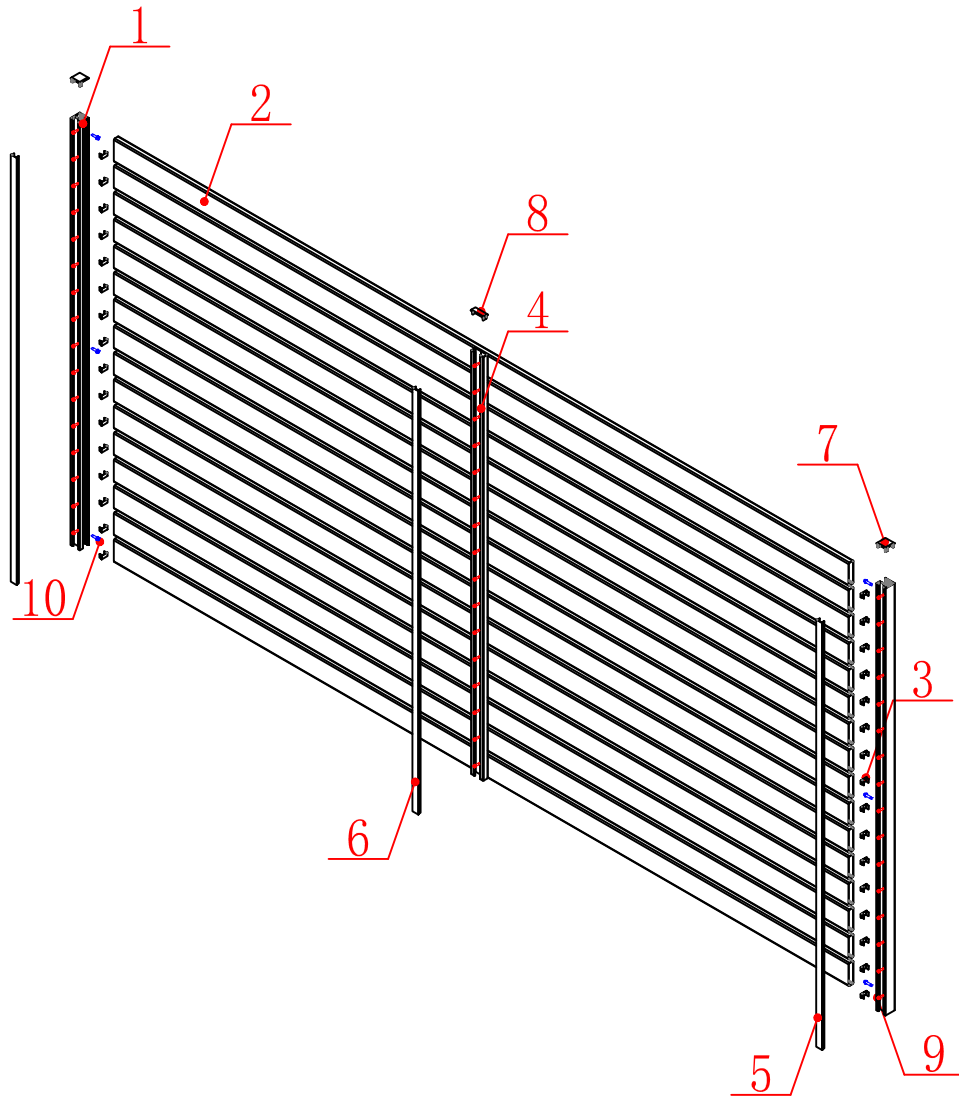


NO.	1	2	3	4	5	6	7	8	9	10
IMAGE	 30x30mm	 65x16mm		 40x15mm			 L R			
ITEM	U-Post 1800mm	Slats 2384mm	Spacers 10mm	Mid Post 1790mm	U-Post Cover 1800mm	Mid Cover 1790mm	U-Post Cap	Mid Post Cap	Screws M4x16mm	Screws M5.5x20mm
QTY	2	24	48	1	2	1	2+2	2	72	10




1800x2400mm Vertical Installation P6-8

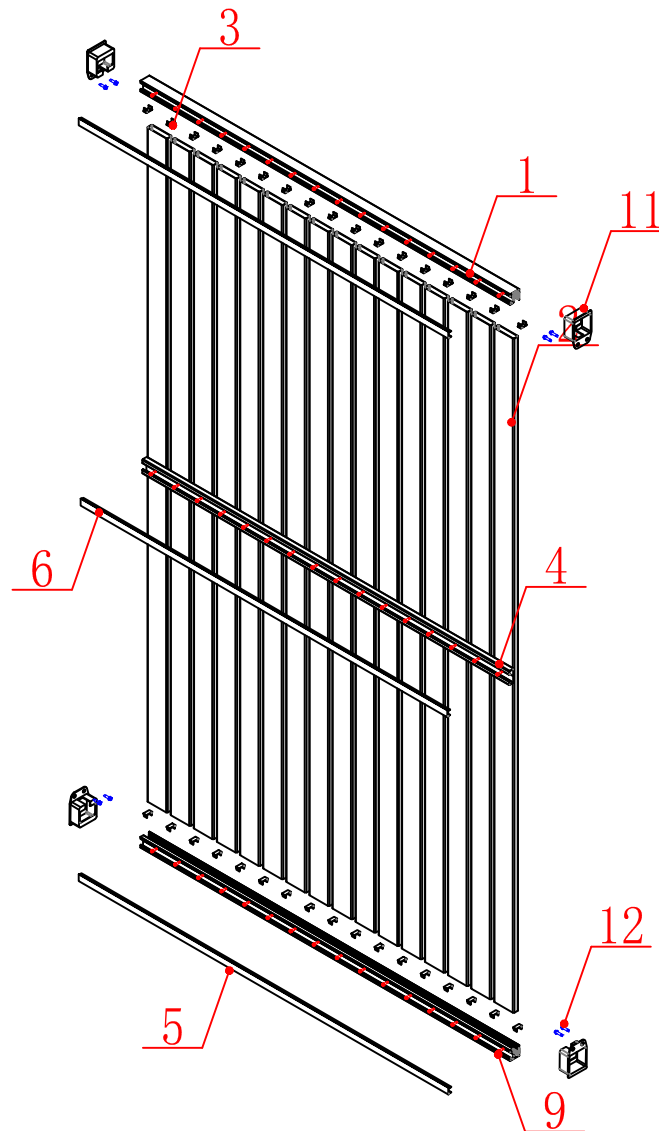


NO.	1	2	3	4	5	6	9	11	12
IMAGE									
ITEM	U-Post 1810mm	Slats 2384mm	Spacers 10mm	Mid Post 1790mm	U-Post Cover 1810mm	Mid Cover 1790mm	Screws M4x16mm	Brackets 30x50mm	Screws M6.3X25mm
SIZE	2	24	48+2	1	2	1	72	4	8


Step 1 Mounting of vertical posts(Flanged and Inground are available).

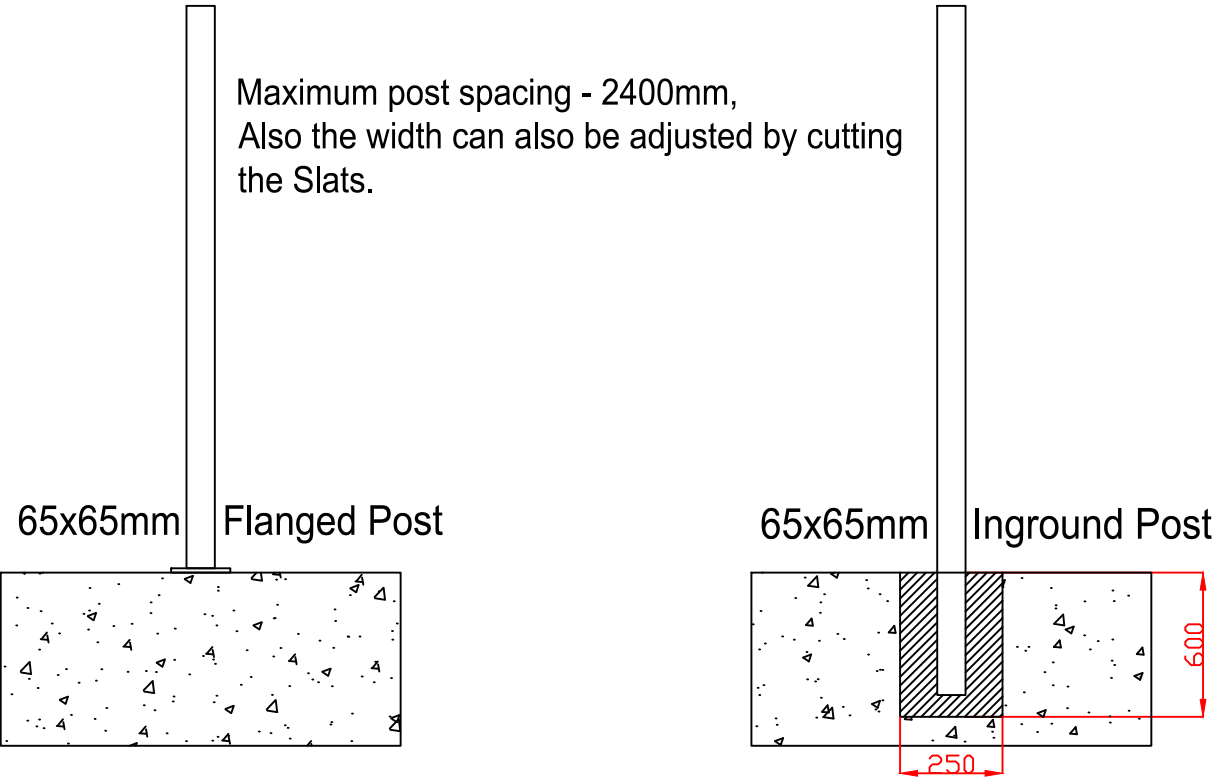


Step 2 Bolt the U-Post to the post.

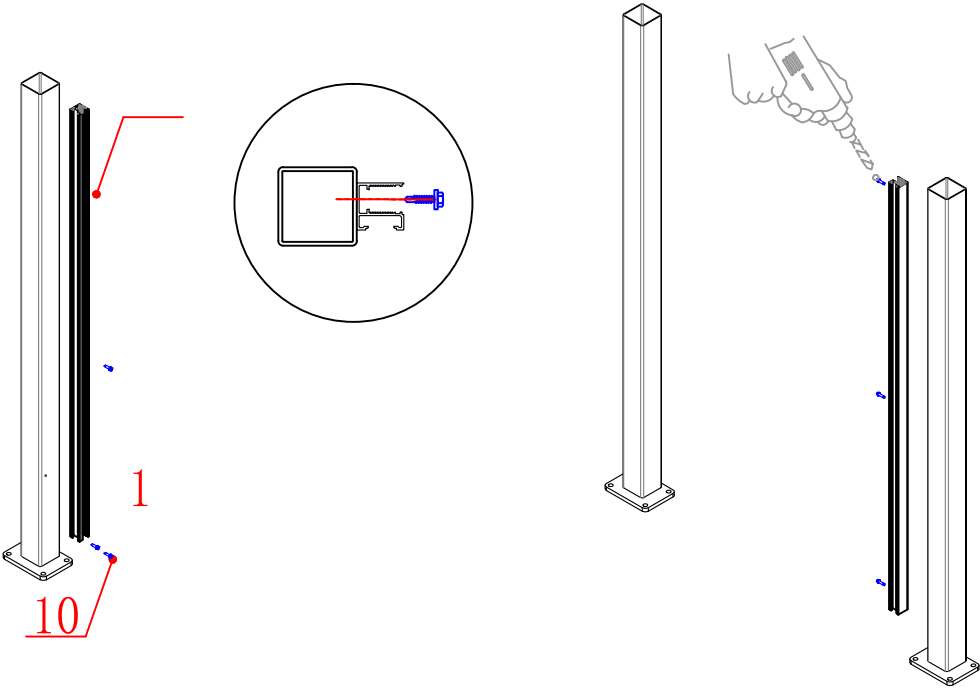


Step 3 Insert the slats and spacers into the Upost and fix it securely.

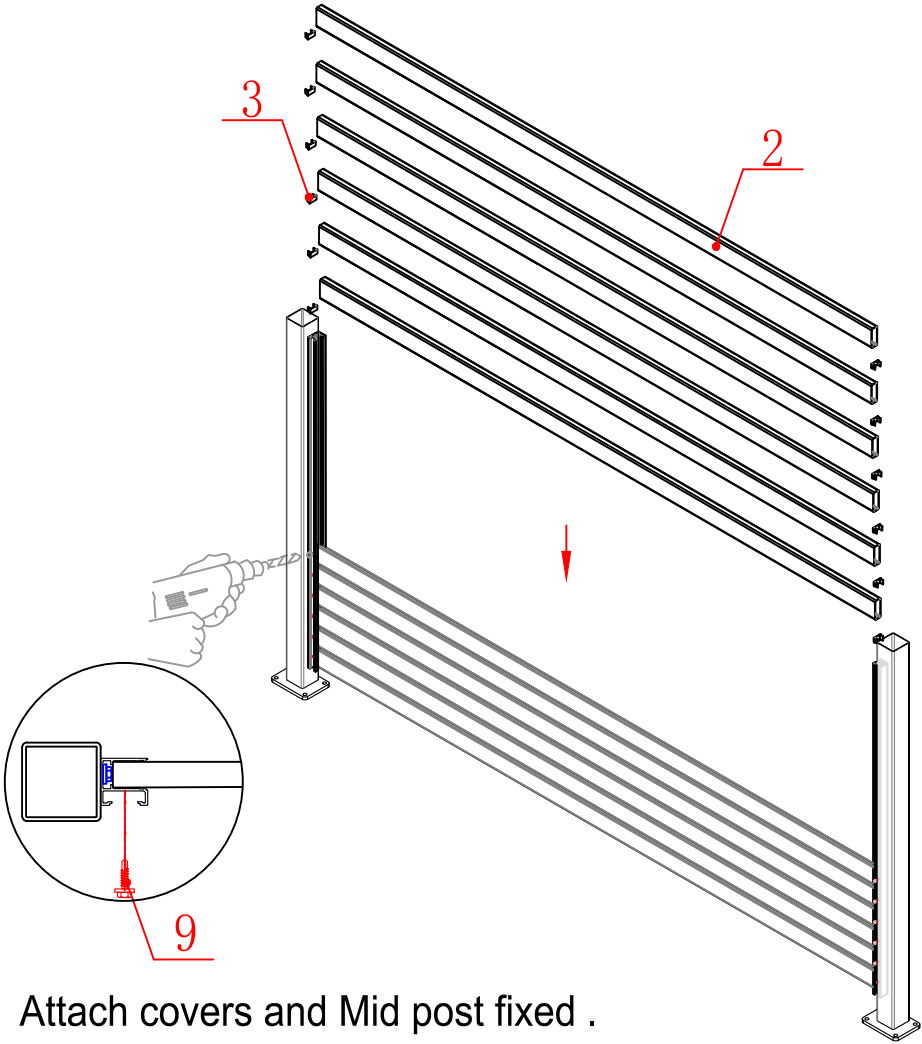


Step 4 Attach covers and Mid post fixed .

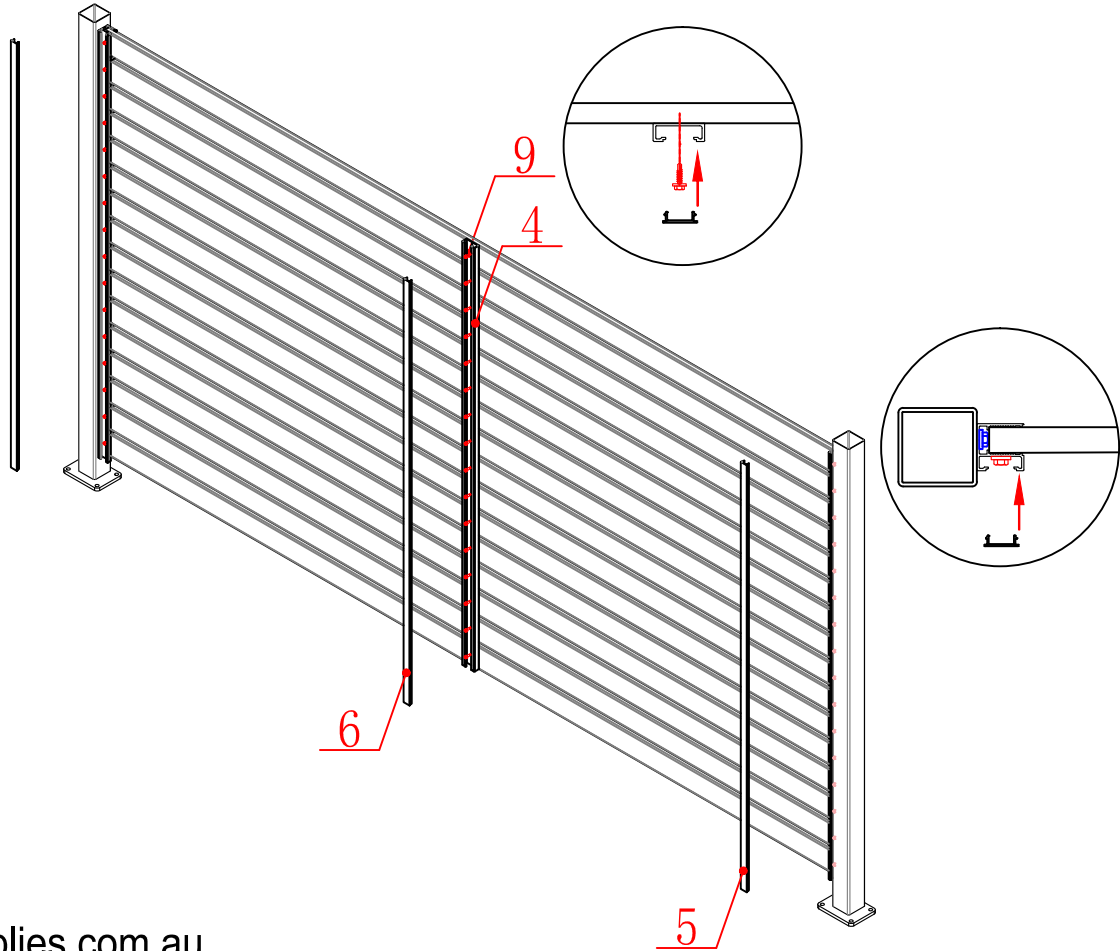

Step 5 Attach U-Post and Mid Post caps.

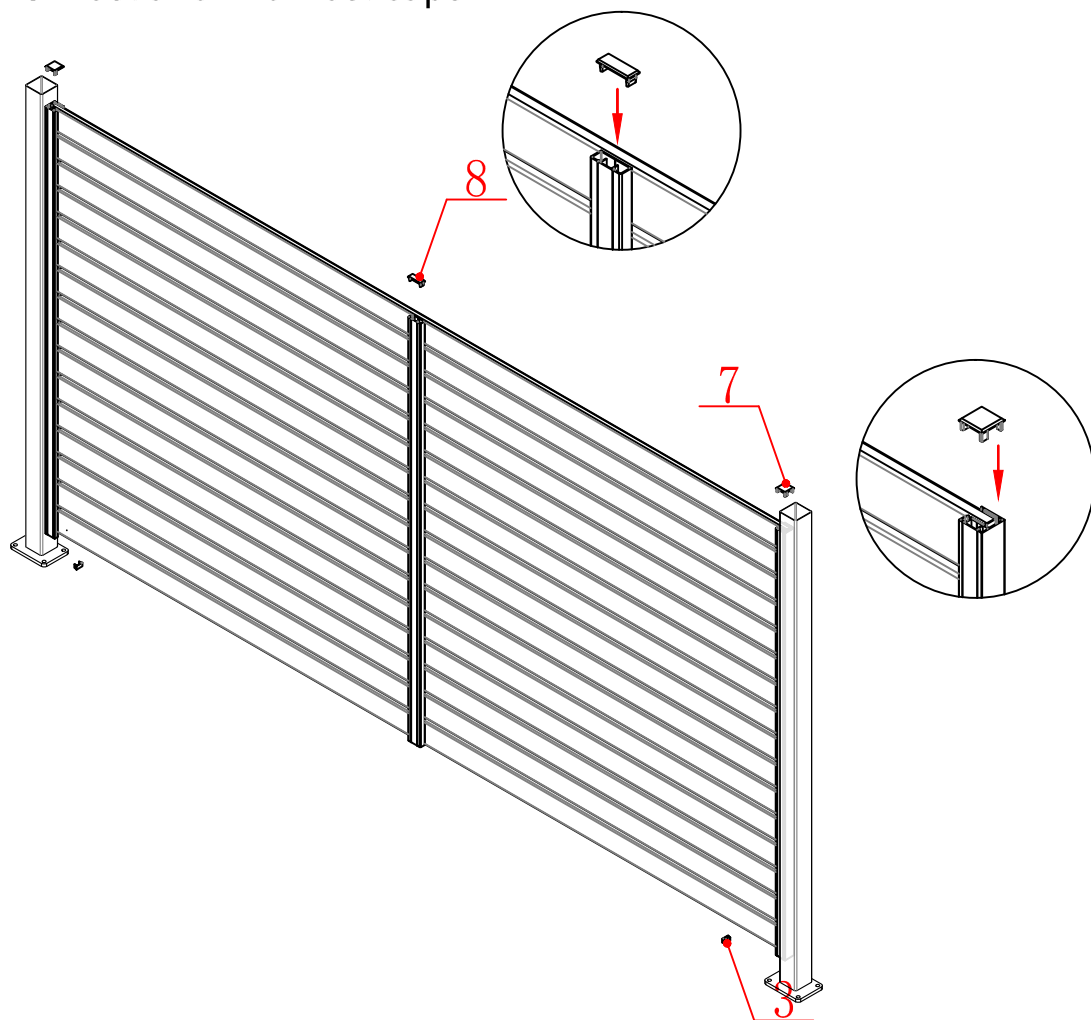


Step 6 Attach Post Cap .

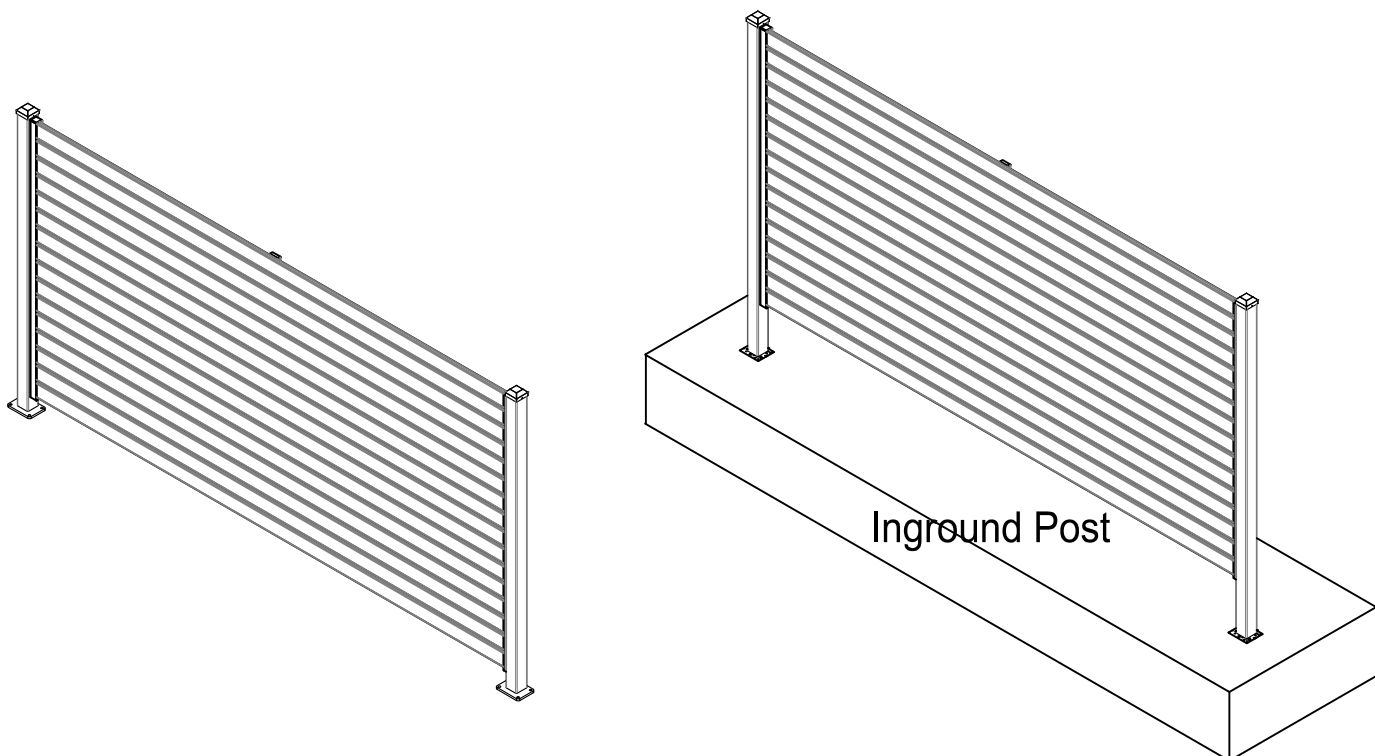


Step 1 Mounting of vertical posts(Flanged and Inground are available).


65x65mm Flanged Post

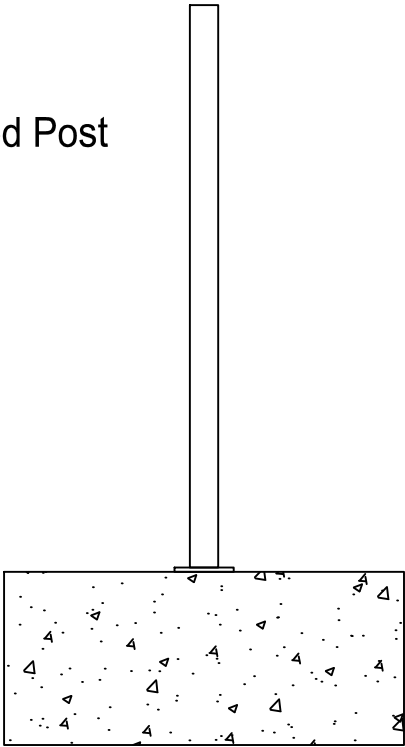


65x65mm Inground Post

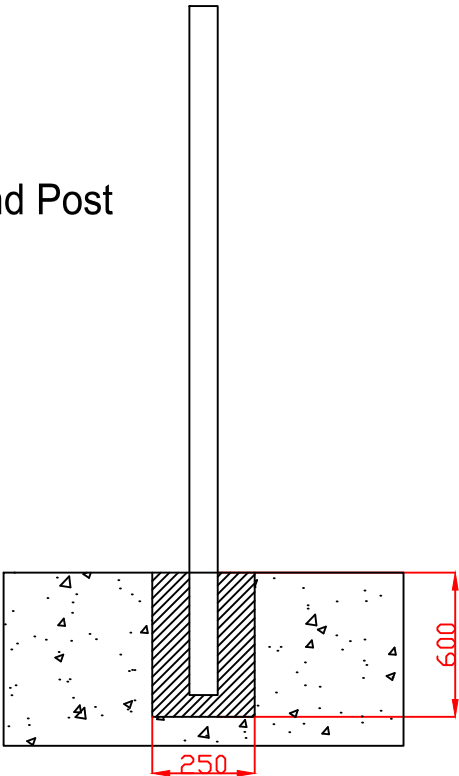


Step 2 Insert the slats and spacers into the Upost and fix it securely.

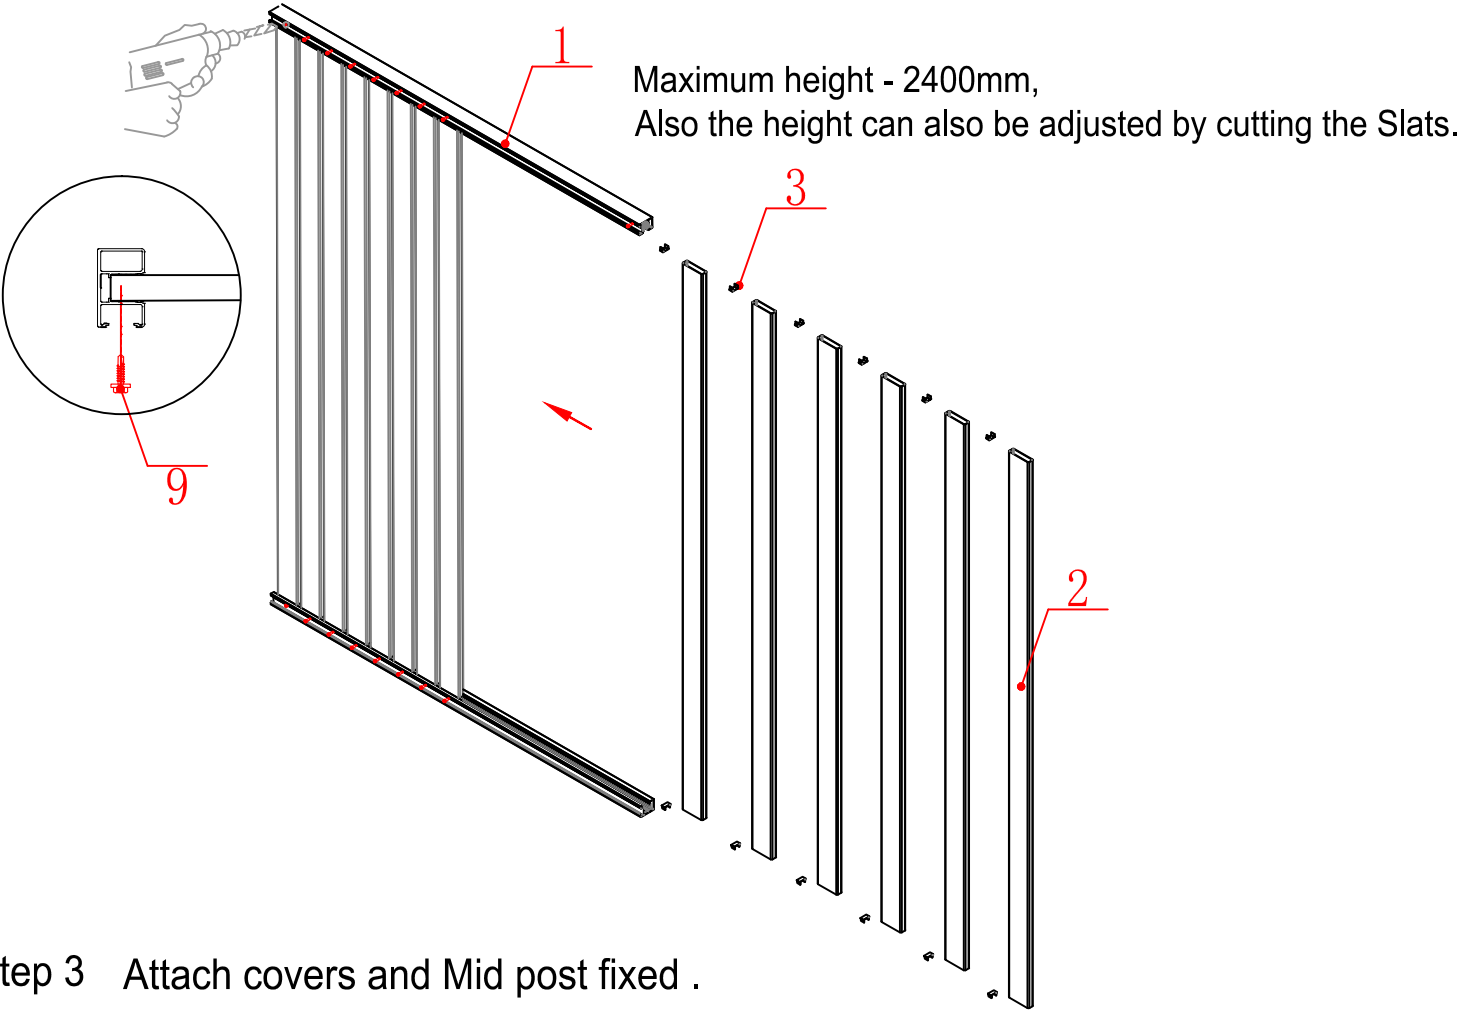

Step 3 Attach covers and Mid post fixed .

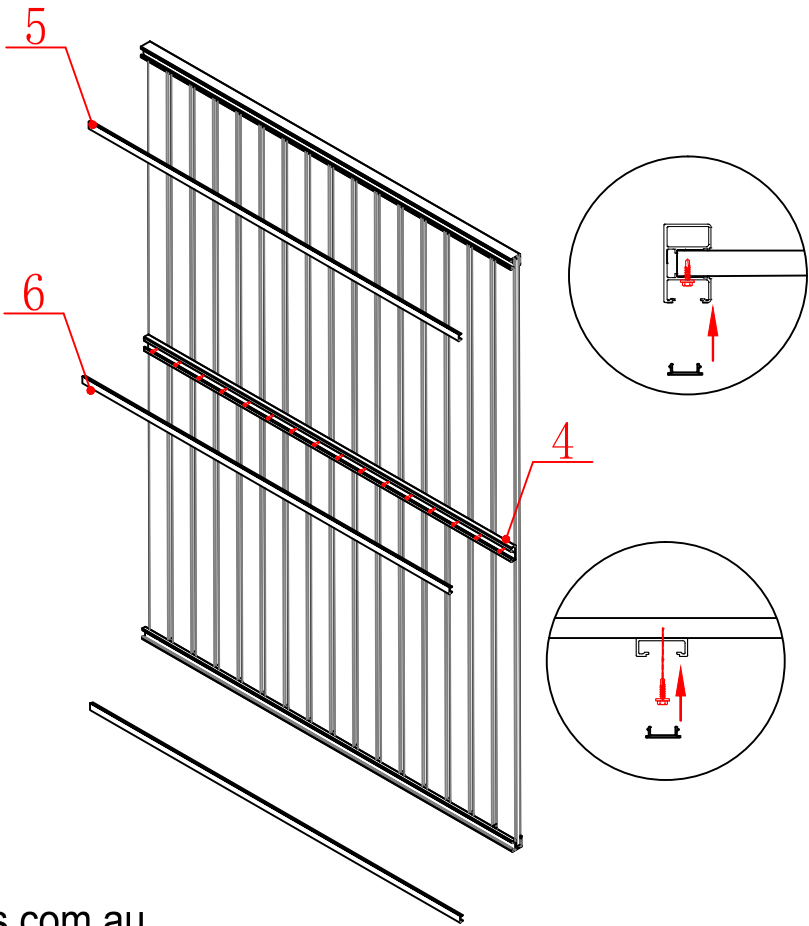

Step 4 The bracket is installed and secured with screws onto the upright posts.

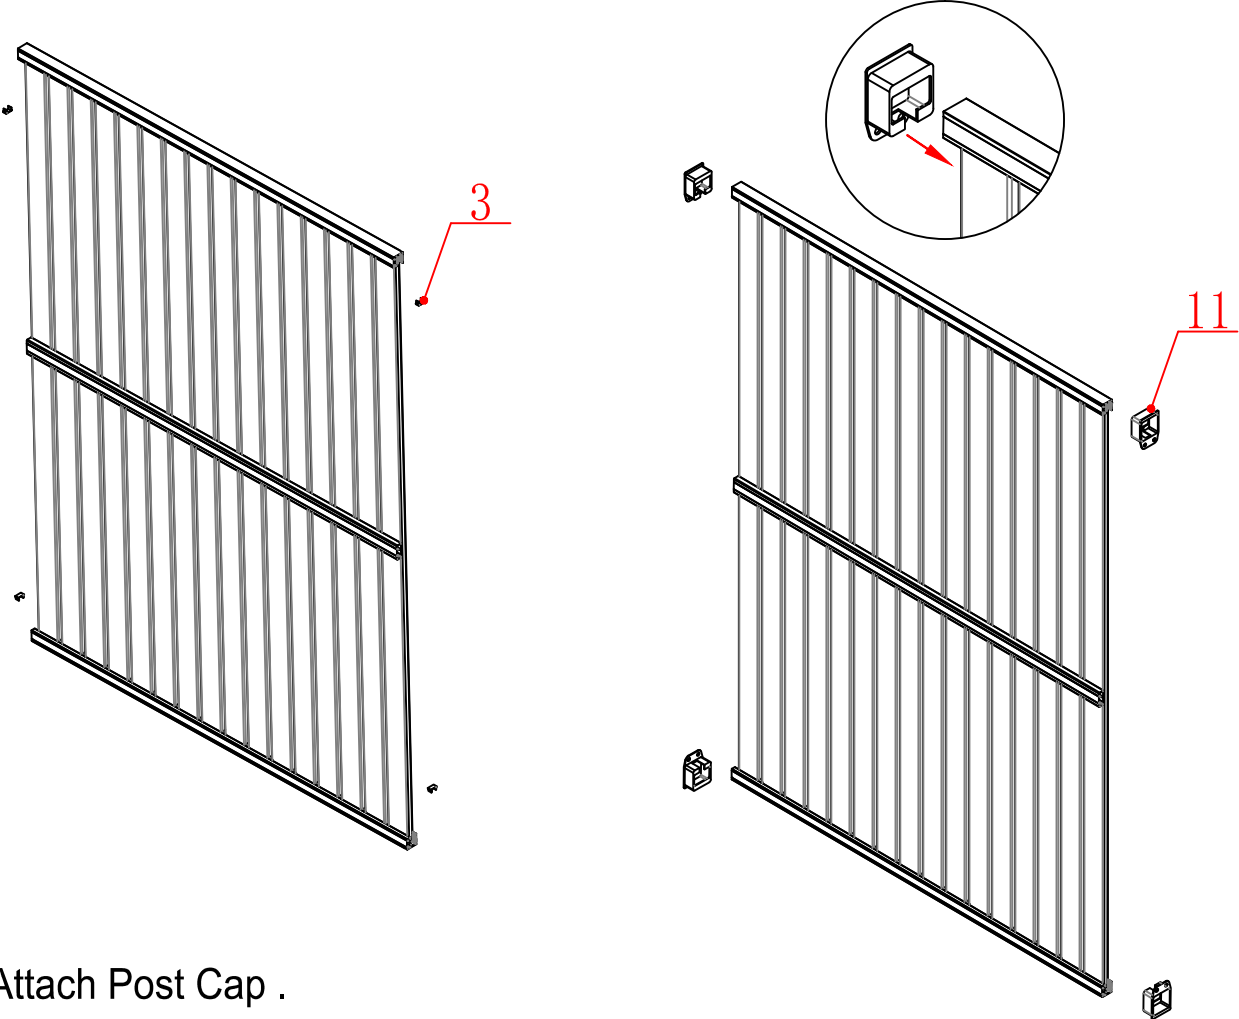

Step 5 Attach Post Cap .

